

How to Adjust the Seatback Angle

Select vehicles allow the driver, front passenger and 2nd-row passengers to adjust the angle of their seatbacks for optimum comfort.

Front Row

Power-adjustable seats

To adjust the angle of the seatbacks, use the vertically oriented switch button to toggle forward or back.

Manually adjustable seats

To adjust the angle of the seatbacks: Lift the rearmost lever, move the seatback to the desired position and then release the lever.



Power-adjustable seats

2nd Row

The outboard 2nd-row seats feature seatback-release levers on the door side of each seat. Lift the lever, move the seatback to the desired position and release the lever.



See your vehicle's Owner's Manual for even more details. You can download one at mygarage.honda.com.