


# How to Adjust the Steering-Wheel Position

The height of the steering wheel and its distance from the driver can be adjusted for optimum comfort and control.

- 1 Make sure the vehicle is in Park and the driver's seat is properly adjusted.
- 2 On the left side of the steering column, push down on the release lever.
- 3 Raise or lower the steering wheel to the desired height.
- 4 Push or pull the steering wheel to the desired position.
- 5 When done adjusting, lift the release lever all the way up to lock it.
- 6 Make sure the instrument panel is visible and the wheel is easy to use.

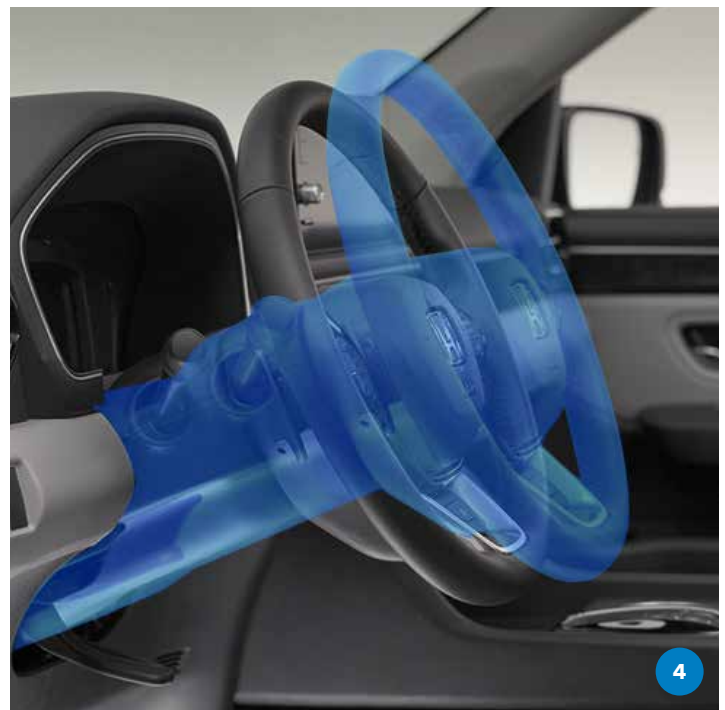

See your vehicle's Owner's Manual for even more details. You can download one at [mygarage.honda.com](https://mygarage.honda.com).