


How to Find and Use the Hood Release


You never know when you might need to open the hood to check your oil or windshield-washer fluid. Here's how it's done:

Step 1

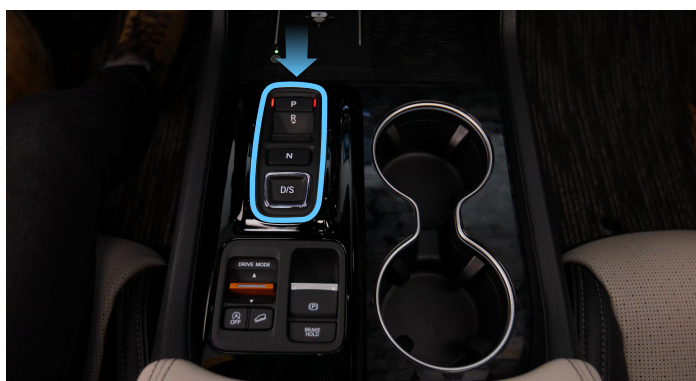


Park the vehicle and set the parking brake.

Step 2

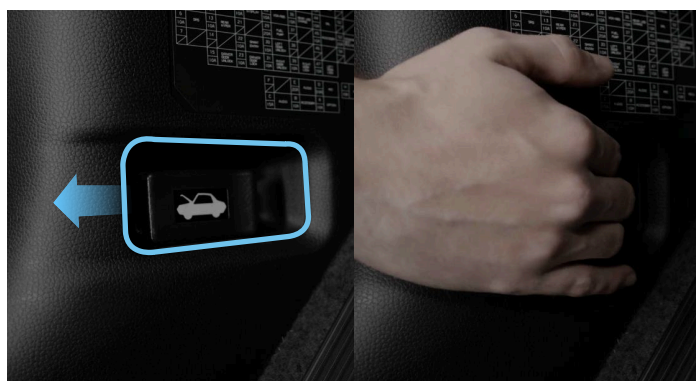


Pull the hood release handle under the driver's side lower corner of the dashboard—the hood will pop up slightly

Step 3

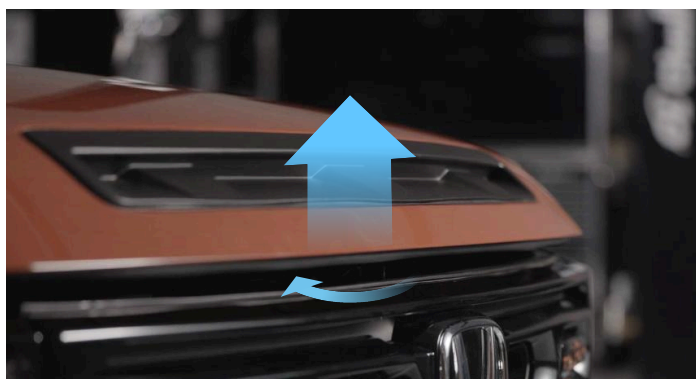

Push the hood latch lever sideways (it's located under the center front edge of the hood) and hold it while you lift the hood; then release the lever

Step 4

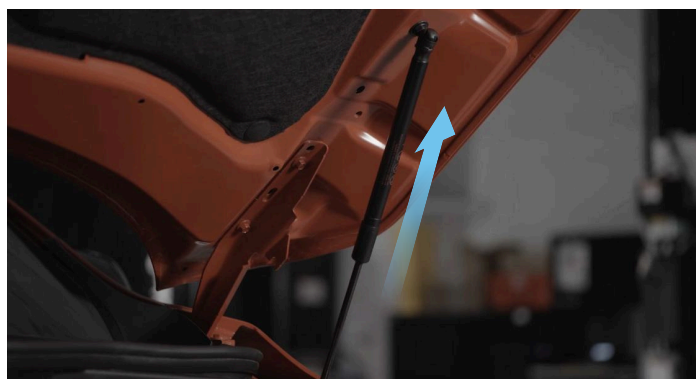

Lift the hood most of the way up; the hydraulic supports will lift it the rest of the way and hold it up

See your vehicle's Owner's Manual for even more details.
You can download one at mygarage.honda.com.

2026 Passport Shown