

Open the Hood

The hood on this vehicle has a release and an underhood latch; here's how to work them.

- 1 Make sure the transmission is in PARK and the parking brake is set.
- 2 Pull the hood-release handle beneath the driver's side of the dashboard; the hood will pop up slightly.
- 3 At the front of the car, slide your hand under the center of the hood and push the latch lever to the right; then raise the hood and release the lever.
- 4 Remove the support rod from its clamp using the grip, and mount the support rod into its receptacle in the hood.
- 5 To close the hood, replace the support rod in its clamp; then lower the hood until it's about 12 inches high, let it drop and double-check that it's shut.

