

How to Turn Off the Rear Parking Sensors

When towing a trailer or using an accessory such as a rear-mounted bike rack, you'll want to turn off the rear parking sensors to prevent unwanted alerts. Here's how it's done.

- 1 With the transmission in Park and the power on, press the parking sensor button to the left of the steering column to turn off the system; the indicator in the button will go dark when the system is off.
- 2 Turn the vehicle power off.
- 3 Press and hold the parking sensor button, and turn the vehicle power on.
- 4 Keep pressing the parking sensor button for 10 seconds, and release the button when the indicator in the button starts flashing; you'll hear a single beep.
- 5 While the indicator is flashing, press the button again; the indicator will go off and you'll hear two beeps signalling that the rear sensors are deactivated.
- 6 The rear sensors will remain off until turned back on again using the same procedure; you'll hear three beeps when the rear sensors are reactivated.



Transmission in Park



Vehicle Power Button



Parking Sensor Button