

## Customize Auto-Door Locking/Unlocking Accord LCD Models

This system makes for exceptional convenience and confidence. Plus, you can adjust when—and if—your vehicle's doors automatically lock and unlock. Familiarize yourself with the LCD audio touch-screen and learn how to use the LIST/SELECTOR knob to scroll through options and select your choice by PUSHING it.



### Follow these steps:

- 1 Put the vehicle in PARK with the ignition ON
- 2 Press the MENU/CLOCK button
- 3 Select Settings
- 4 Select Vehicle Settings
- 5 Select Door/Window Setup
- 6 Select Auto Door Lock
- 7 Select desired door-lock setting
- 8 Select Auto Door Unlock
- 9 Select desired door-unlocking setting

For more information, see your Owner's Guide.