

How to Use Interior Lights

You can select how you want the interior lights to operate using the overhead switches.



Map Light Button

Overhead Switch

Map Light Button

Interior-Light Switch

- With the overhead switch in the Door Activated position, the interior lights will come on when any door or the tailgate is opened, the driver's door is unlocked or the power mode is switched to Off.
- When the switch is in the On position, the lights will come on regardless of door or tailgate status.
- Turning the switch to Off keeps the lights from working regardless of door or tailgate status.

Map Lights

- The front map lights are turned on and off by pressing the map light buttons.
- The 2nd- and 3rd-row map lights are turned on and off by pressing the lenses.
- The map lights won't come on if the front interior-light switch is set to Off.



2nd- and 3rd-row Map Lights

Cargo-Area Light

The cargo-area light comes on when the tailgate is open.

See your vehicle's Owner's Manual for even more details. You can download one at mygarage.honda.com.