

How to Use the Driver's Seat Memory System

You can store the driver's seat position (except lumbar setting) and outside mirror position for two drivers in the memory system. Note that keyless remote 1 is linked to memory button 1, and keyless remote 2 is linked to memory button 2.

- 1 With the power ON, adjust the seat and side mirrors to the desired positions.
- 2 Press the SET button on the driver's door.
- 3 Within 5 seconds, press memory button 1 or 2.
- 4 When the settings have been memorized, you'll hear a double beep.

Now, when you unlock the vehicle with the keyless remote, the driver's seat and side mirrors will move to the positions appropriate to that remote. You can also recall the positions by pressing the memory button on the driver's door.

