

Interior Cabin Lights

Honda vehicles have front cabin lights and rear cabin lights—and in some cases, cargo lights (SUV and minivan). The cabin light switches have three positions: ON, Door Activated and OFF. Set your lights how you want them to operate.

Follow these steps:

Overhead Lights


- **ON:** With the switch in the ON position, the lights stay on whether the doors are open or not
- **Door Activated:** With the switch in the center position, the lights come on in the following situations:
 - When any of the doors or tailgate are opened
 - When the driver's door is unlocked
 - When the power mode is set to Vehicle Off
- **OFF:** With the switch in the OFF position, interior lights remain off whether the doors or tailgate are open or closed

Map Lights

- **Front:** The map lights can be turned on and off by pressing the lenses (or buttons next to the lenses if the vehicle has a panoramic roof)
- **Second and Third Row:** The map lights can be turned on and off by pressing the lenses when the front interior light switch is in the Door Activated position

Cargo Area Light

- **ON:** With the switch in the ON position, the light stays on whether the tailgate is open or not
- **Tailgate Activated:** With the switch in the center position, the light comes on when you open the tailgate and goes off when it's closed
- **OFF:** With the switch in the OFF position, the cargo light stays off whether the tailgate is open or closed

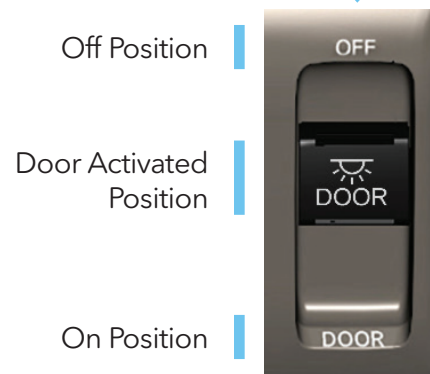

Map Lenses

For more information see your, Owner's Guide.