

How to Use the Pitch & Roll Gauge

This feature shows the pitch and roll angles of the vehicle. It's intended for reference when the vehicle is not moving and may be less accurate when in motion. There are two ways to display the pitch & roll gauge:

Method 1: Engage Trail Mode

Use the drive mode switch to select **TRAIL**. The pitch & roll gauge will automatically display.





Method 2: Select the Gauge Manually

Roll the selector wheel on the right side of the steering wheel to Pitch/Roll Gauge and push in to select it.



