

How to Customize Interior Light-Dimming Time –LCD Models

Honda vehicles equipped with the LCD audio screen enable you to customize certain settings, including how long the Interior overhead light stays on after closing the doors. Use the controls on the LCD to customize the lighting.



Follow these steps:

1. With the vehicle in **Park**, turn the ignition to **Accessory** or **On**
2. Press the **MENU/CLOCK** button
3. Rotate the Selector Knob to **Settings**; then press it
4. Rotate the Selector Knob to **Vehicle Settings**; then press it
5. Rotate the Selector Knob to **Lighting Setup**; then press it
6. Rotate the Selector Knob to **Interior Light Dimming Time** and press it
7. Select from: **60 seconds**, **30 seconds** or **15 seconds**;
then press the **Selector Knob** to confirm