


## How to Customize Interior Light-Dimming Time –MID Models

Honda vehicles equipped with the Multi-Information Display (MID) enable you to customize certain settings, including how long the interior lighting stays on after closing the doors. On the right side of the steering wheel, use the UP/DOWN and SEL/RESET buttons to customize the lighting.

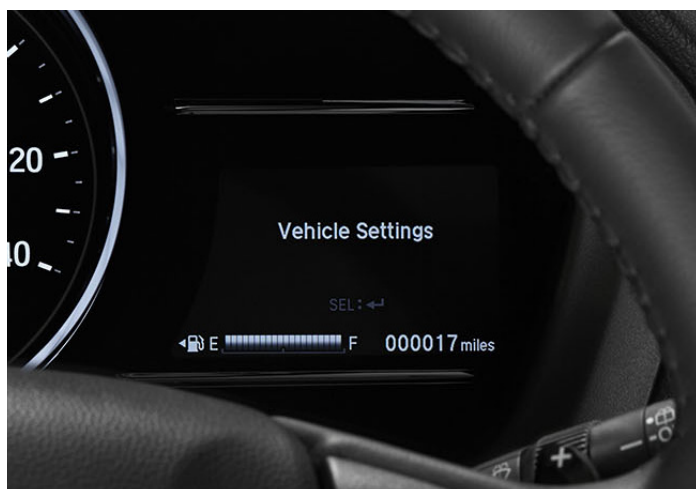

Select/Reset Button

### Follow these steps:

1. With the vehicle in **Park**, turn the ignition to **Accessory** or **On**
2. Press the **UP/DOWN** button until **Vehicle Settings** appears;  
then push the **SEL/RESET** button
3. Press the **UP/DOWN** button until **Lighting Setup** appears;  
then push the **SEL/RESET** button
4. Press the **UP/DOWN** button and select **Interior Light Dimming Time**;  
then push **SEL/RESET** button
5. Press the **UP/DOWN** button and select from: **60sec, 30sec, 15sec**;  
then push the **SEL/RESET** button
6. Press the **UP/DOWN** button until **Exit** appears on the display;  
then push the **SEL/RESET** button
7. Repeat step 6 until you return to **Home** screen