


## How to Adjust the Steering-Wheel Position

This vehicle allows you to adjust the steering wheel to your preferred position. Here's how:

- 1 First, make sure the driver's seat is adjusted to your liking
- 2 With the vehicle parked, lower the lever on the bottom of the steering column
- 3 Move the steering wheel up or down
- 4 Pull the wheel closer to you, or push it farther away
- 5 When the proper position has been established, raise the lever on the bottom of the steering column

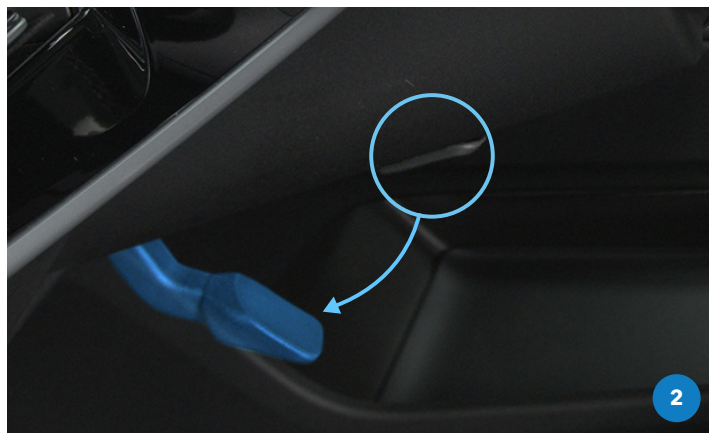

See your vehicle's Owner's Manual for even more details. You can download one at [mygarage.honda.com](https://mygarage.honda.com).

2024 Prologue Elite shown