


How to Use Interior Lights



Front-Seat Lights

The front-seat lights are located in the overhead console; each can be turned on and off by pressing on its lens



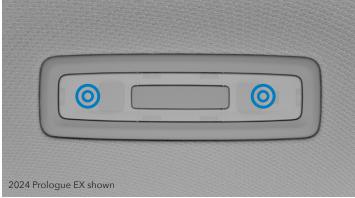

Rear-Seat Lights on Trims with Moonroof

The rear-seat lights on moonroof trims are located next to the assist handle on each side of the vehicle; each can be turned on and off by pressing on its lens

Rear-Seat Lights on Trims without Moonroof

The rear-seat lights on trims without a moonroof are located above the rear seats; each can be turned on and off by pressing on its lens