

## **How to Use Interior Lights**



## **Front-Seat Lights**

The front-seat lights are located in the overhead console; each can be turned on and off by pressing on its lens





## **Rear-Seat Lights on Trims with Moonroof**

The rear-seat lights on moonroof trims are located next to the assist handle on each side of the vehicle; each can be turned on and off by pressing on its lens

## **Rear-Seat Lights on Trims without Moonroof**

The rear-seat lights on trims without a moonroof are located above the rear seats; each can be turned on and off by pressing on its lens