

How to Adjust the Front Seats



The driver's and front passenger's power seats can be adjusted with the controls on the outboard side of each seat cushion.

1 To Move the Seats Forward or Back and Raise or Lower the Seat

- Slide it to the front or rear to move the seat forward or rearward
- Move the front of the control up or down to raise or lower the front of the seat cushion
- Move the back of the control up or down to raise or lower the entire seat

2 To Change the Seatback Angle

Tilt the top of the vertically oriented control forward for a more upright position, and rearward for more recline

3 To Adjust the Lumbar Support (Driver's Seat)

Push the front of the round control to increase lumbar support, and push the rear of the control to reduce support

See your vehicle's Owner's Manual for even more details. You can download one at mygarage.honda.com.

2024 Prologue Elite shown